



OWNER'S MANUAL

IC635P LED Chromatherapy Light Kit INSTALLATION AND OPERATION INSTRUCTIONS

INSPECTION

Inspect the kit for damage or shortages prior to installation. Damage sustained in transit is the responsibility of the carrier. If transit damage is discovered, notify the carrier immediately and file a freight claim with them.


TOOLS & MATERIALS REQUIRED

For safety and ease of installation, Jason recommends the following tools: Phillips head Screwdriver, drill, hammer, level or square and a circular saw if needed.

Included with each Kit:

- 1- Light Kit (Includes transformer w/ 15 ft. long, low voltage wiring and 2-LED lights.)
- 2- LED Light Brackets.
- 4- #10 X 1-lg Screws.
- 1- Air Transmitter Switch (Includes Nut.)
- 1- Air Transmitter Trim.
- 1- 6-ft length of Air Transmitter Tubing.
- 1- 15-ft. Split Conduit.
- 1- Reflective Mylar Sheet.

Figure 1

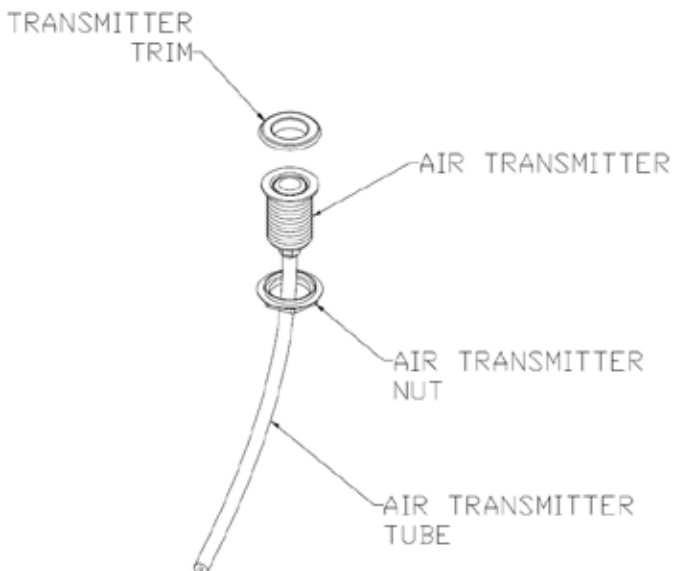

INSTALLATION

1. Locate the Air Switch Kit packed with the bath.
2. Snap the Air transmitter Trim onto the Air Transmitter.
3. Select location convenient for the bather actuation of the Air Transmitter (within the range of the provided six foot of Air Transmitter Tubing and the 15-ft. of low voltage wiring from the 12v. transformer to the LED lights.).
 - a. Drill a 1/1/4" [3cm] diameter hole for the Air Transmitter in the selected location.
 - b. Apply a small bead of silicone and push the Air Transmitter through the hole, securing it in place with the Air Transmitter Nut provided.
 - c. Attach tubing to the nipple on the backside of the Air transmitter. (See Fig. 1)
4. Mount the transformer to the surrounding framing near the bath to permit for inspection and servicing of the unit.

NOTICE: It is advised that the wiring leading from the transformer to the light socket shall be routed away from contact with grounded metal parts, or any conductive plumbing components and isolated metal parts exposed to the occupant of the tub. The transformer enclosure shall be mounted with the strain relief bushings oriented downwards to prevent water invasion. Transformer should not be installed outside unless properly covered. Due to possible overheating, the vent holes at the back of the light housing must be left open. Do not insulate to the point of contact with part of the light.

5. Measure and cut the Air Transmitter Tube to length, removing all excess tubing. Push the Air Transmitter Tube onto the air tube connection on the Transformer.
6. The Mirrored Mylar film is to be placed on the floor, centered in the footprint of the bath. The LED lights mount in the receptacles which twist lock into the LED light Brackets. The lights should be located near each side of the center foot of the bath, looking toward the ends of the base. Secure to the floor with screws provided. Refer to the IC635P Owner's Manual (49-1000-019) for further details.
7. Plug power supply cord into a 120volt GFCI receptacle.

INSTALLATION INSTRUCTIONS (cont.)

NOTE: IT IS RECOMMENDED THAT THE LIGHT KIT BE INSTALLED DURING THE BATH INSTALLATION.

NOTE: ALL ELECTRICAL BOXES AND CONNECTIONS MUST BE AT LEAST 1-1/2" [4cm] ABOVE FLOOR


DANGER RISK OF ELECTRIC SHOCK: Connect only to a circuit protected by a Ground Fault Circuit Interrupter (GFCI). In the unlikely occurrence of a current imbalance in the power conductors, the GFCI will interrupt power to the unit.

WARNING: The power to the GFCI must not be interrupted by any control device. The GFCI must be installed either at the service panel or between the service panel and the control device.

OPERATING INSTRUCTION

The Air Switch provides a safe and convenient method of controlling your bath's LED mood lights. The multicolored mood lights provides an assortment of pre-programmed lighting shows that include fixed and transitional color changes. Simply press and release to turn on, off, and scroll through the pre-programmed light shows.

Figure 2

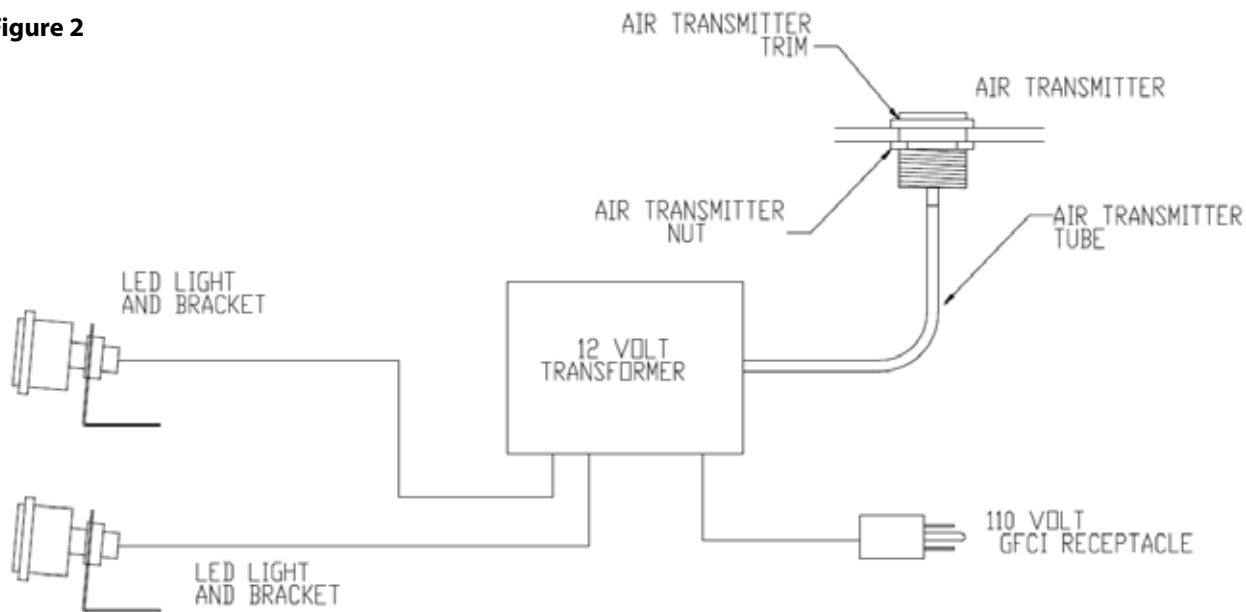

JASON INTERNATIONAL, INC.

8328 MacArthur Drive • North Little Rock • Arkansas • 72118

www.jasoninternational.com