




## OWNER'S MANUAL

# Operating Instructions for Jason Jetted Neck Pulse-Pillow

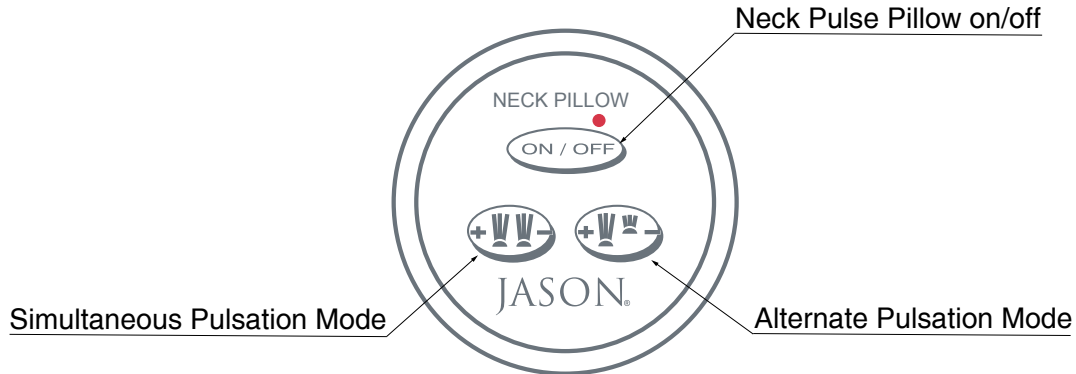

### ON/OFF AND CONSTANT MODE

**CAUTION:** To operate Jason's Jetted Neck Pulse-Pillow, the whirlpool pump must be operating.

1. To start the jetted neck system, simply press the On/Off key.
  - Both jets will function simultaneously in the Constant mode.
2. To stop the jetted neck system, press the On/Off button again.

### SIMULTANEOUS PULSATION MODE

**Note:** To select the simultaneous pulsation mode, the jetted neck system must be On.

1. Press the Simultaneous Pulsation Mode key once to select the simultaneous pulsation mode.
  - The water flow will pulsate (on/off) at low speed simultaneously through both jets.
2. Press the key once again for high speed.
3. Press the key once again to return to low speed.

### ALTERNATE PULSATION MODE

**Note:** To select the alternate pulsation mode, the jetted neck system must be On.

1. Press the Alternate Pulsation Mode key once to choose the alternating pulsation mode.
  - The water flow will pulsate (on/off) alternating between both jets at low speed.
2. Press the key once again for high speed.
3. Press the key once again to return to low speed.

**Note:** The pillow system must be turned Off to return the jetted neck system to the Constant mode. After being turned Off, the pillow system will always come On in the Constant mode.