

forma™ and Designer Collection Standard Edition AirMasseur® Touch Control Keypad



BLOWER & CONTROL SYSTEM

Jason's new Standard Edition AirMasseur® system includes a quiet 1 HP, variable speed blower with automatic air heater, and a simplified consumer friendly touch control keypad with 20-minute timer and automatic purge and dry cycle.

BLOWER ON/OFF, SPEED, AND MESSAGE MODE KEYS

Standard Edition AirMasseur® baths are completely factory assembled and tested and the control console is conveniently located on the deck of the bath.

The AirMasseur® icon is used to activate the blower and the 20-minute timer. Pressing the Icon once starts the blower in the constant high speed mode. Pressing the icon again will turn the blower off. (Note: The blower will always turn on in high speed.)

The Mode icon is used to move the blower from Constant mode to the Wave or Pulse modes. Press and release the icon once to change the blower to the Wave mode, indicated by a slow flashing light. Pressing the icon again will change the blower to Pulse mode. This is indicated by a rapid light flash. Pressing the icon a third time moves the blower back to Constant mode.

The Blower Speeds icon is used to increase or decrease the blower speed once the blower is on. Press and hold the icon to decrease the blower speed

until the desired intensity is reached, then release. Press and hold the icon again to increase the blower speed until the desired intensity is reached. The blower will return to its highest speed on any mode change.

The Option icon is used to operate an optional LED light (if installed). Press the icon for less than two (2) seconds to turn the lights Off or On. Hold the icon for more than two (2) seconds to change modes. This function has a two (2) hour timer and remembers the last mode.

AUTOMATIC PURGE CYCLE


Fifteen (15) minutes after being stopped, the blower will automatically start for 2 minutes to purge and dry the air channel.

AUTOMATIC HEATER

The air heater incorporated in the air blower will automatically operate when the blower is on to help maintain the temperature of the bath water.

REMOTE MOUNTING OF AIR BLOWER

The air blower can be remotely mounted up to 15 feet from the bath. The cables for the air blower and control must be extended and the air blower must be replumbed using 1-1/2" PVC piping. See Owners Manual.

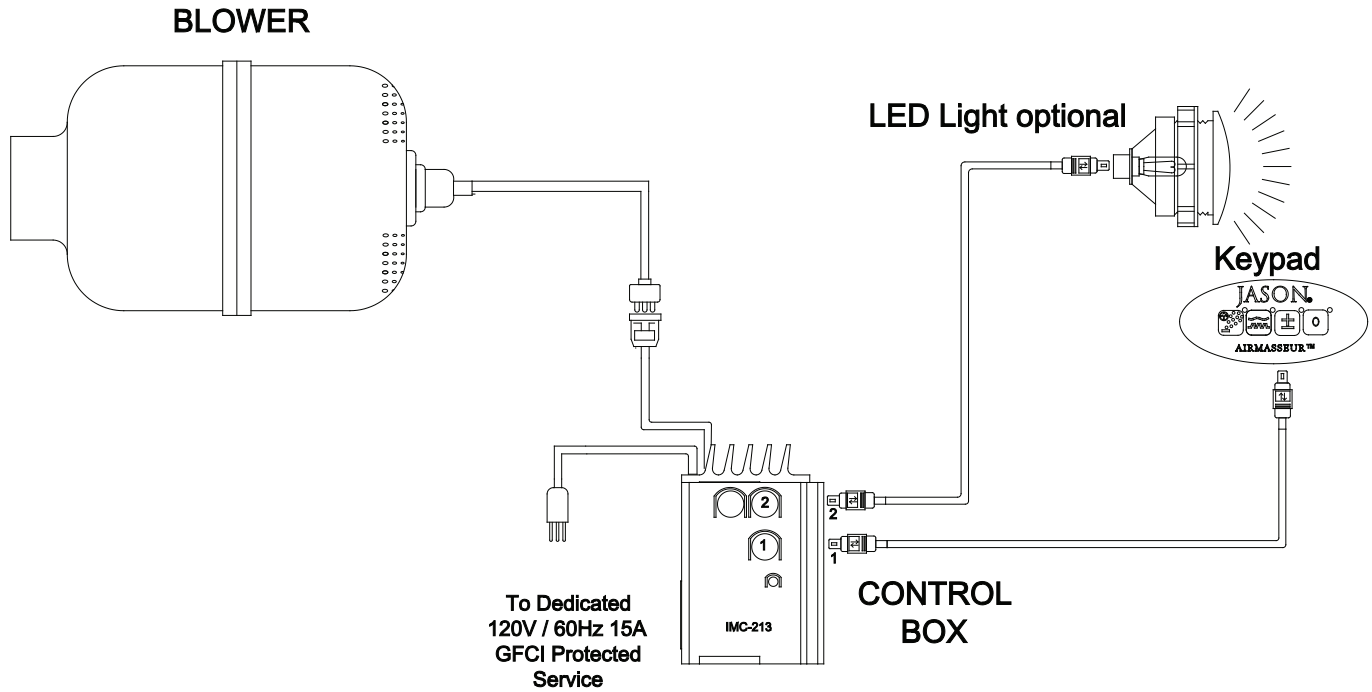

STANDARD FEATURES

- The Jason AirMasseur® touch control keypad is ergonomically placed on the bath deck and contains several keys used by the bather to control the AirMasseur® bath system On/Off function, massage modes, and optional LED light.
- 20-minute AirMasseur® system timer.
- Air Purge feature. Fifteen minutes after the air blower has stopped the blower will start and run for two minutes to purge and dry the air channel.
- The control system is completely factory assembled and tested on each AirMasseur® bath.
- Features three massage modes: Constant, Wave, and Pulse..

SPECIFICATIONS

- Blower:** 1Hp, 120v, 60Hz, with integral air heater and control.
- Electrical Service:** A dedicated service protected by a ground fault interrupter is required. 120v, 60Hz, 15A.