
INSTALLATION INSTRUCTIONS


JASON® BELINA™ DECK MOUNTED HAND SHOWER KIT

Jason's Belina™ Hand Shower Kit for mounting on bath decks. The kit includes a hand shower, deck mounting hardware, and a 59" hand shower hose. **Install this kit in accordance to local codes.**

NOTE: Installation involves drilling one 1-1/16" dia. hole for the Hand Shower.

DRILLING FOR BELINA™ HAND SHOWER KIT

Hole must be drilled in the field by the installer. Cover the installation area with wide masking tape and mark hole centers with a pencil. (The masking tape will help prevent scratches within the area to be drilled.)

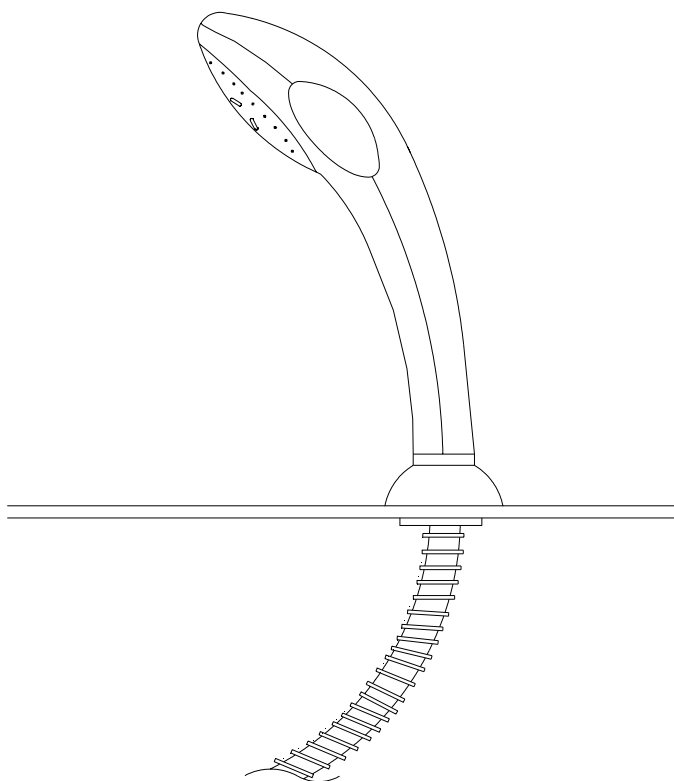

- 1) Locate the Hand Shower hole on the desired surface of the bath deck. Be certain that adequate area behind the bath is left for Hand Shower hose, mounting nuts, and servicing.
- 2) First pilot drill the hole centers using a small 1/8" drill; then use a 1-1/16" hole saw for the Hand Shower. Slowly drill from the acrylic side of the bath.
- 3) Remove the masking tape, then clean the area.

HAND SHOWER INSTALLATION

- 1) Place the deck fitting through the hole and secure with the gasket, washer, and nut provided.
- 2) Assemble the Hand Shower and hose using teflon tape or similar sealant. Thread the hose through the deck fitting. Assemble the hose to the diverter outlet. **NOTE:** A backflow preventor should be installed. The vent ports of the backflow preventor shall not be less than 2" (50.8mm) above the tub or fixture. A dual check valve backflow preventor is also acceptable.