


Home Spa Edition Air-Whirlpool Digital Control Keypad with Remote Control

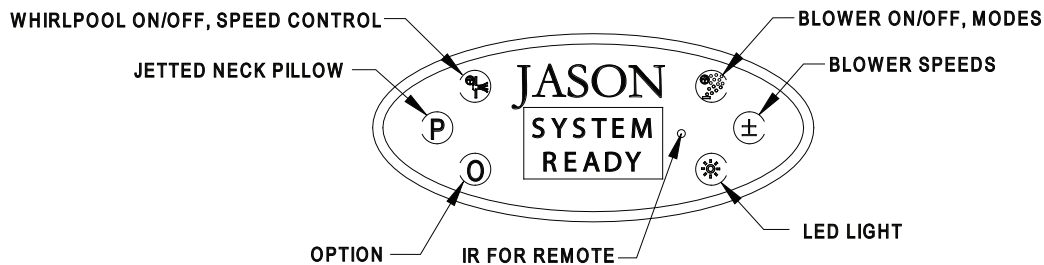

FEATURES

KEYPAD CONTROLS

All functions of the Jason Home Spa bath can be conveniently operated with either one of the two Home Spa digital keypad controls which control the operation of the three speed whirlpool pumps, the air blower, underwater mood lights, and the jetted neck pillows. The dual keypads are used to run individual pumps and jetted neck pillows. The same blower and lights are controlled from both keypads.

WHIRLPOOL ON/OFF (PUMP ICON)

To control the operation of the whirlpool pump motor, press and hold for each setting, High, Medium, Low, or Off. A 20 minute decreasing timer will be initiated when the pump motor starts. Press and release the Pump icon once to display the current pump setting. The Pump icon lights when the water is at operating level and the LCD displays "System Ready". The LCD will display "Pump Off", "Pump High", "Pump Medium", or "Pump Low" when the key is pressed. It also toggles between Temperature (+/- 5°F) and Timer at 5 second intervals. "Low Water" is displayed if no water is detected. (Displays for 5 seconds.)

LED LIGHT (LIGHT ICON)

Hold the key for less than two (2) seconds to turn the lights Off or On. Hold the key for more than two (2) seconds to change color modes. The Light icon should remain lit as long as the bath is connected to a power supply. This function has a two-hour timer

and remembers the last mode. The LCD displays "Light On" or "Light Off" while the key is pressed for less than two (2) seconds; "Light Cycle" is displayed if pressed for more than two (2) seconds.

JETTED NECK PILLOW ("P" ICON)

To control the operation of the jetted neck pillow, press and hold for each setting, you can set for a constant flow on both jets, a pulsing flow on both jets, or a pulsing alternating flow between jets. Press and release the Pillow icon once to display the current pillow setting. The Pillow icon will light whenever the pump is running. The solenoids will open for two (2) minutes to drain during the purge cycle countdown. The LCD will display "Pillow On", "Pillow Pulse1", "Pillow Pulse2", or "Pillow Off" while the key is pressed.

OPTION ("O" ICON)

This key is reserved for future options.

BLOWER ON/OFF AND MODES (BLOWER ICON)

To control the operation of the blower, simply press and hold the key to change the setting to Constant, Wave, Pulse, or Off. A 20 minute decreasing timer will be initiated when the blower motor starts. Press and release the Blower icon once to display the current blower mode and speed. The LCD will display "Const Air" and blower speed, "Wave Air" and blower speed, or "Pulse Air" and blower speed,

while the key is pressed. The time remaining on the purge cycle is displayed after the bath has drained. "Purge Stop" is displayed while the key is pressed during the purge cycle. This action will terminate the purge cycle. The mode settings will be remembered on the next startup.

BLOWER SPEEDS (+- ICON)

Hold the key in Constant mode to go from High to Low then release and hold again to go from Low to High. Hold the key in Wave and Pulse mode to go from High to Medium and Medium to High. The system remembers the last speed setting on the next startup. The icon will light up when the blower is running. The LED displays blower speeds from "10" (Low) or "55"(Med) to "99" (High) while the key is pressed. You can reduce the auto purge idle time from 20 to 10 minutes, by pressing and holding the key for more than 5-seconds during the purge idle period.

CUSTOMIZED SETTINGS

The 12 character LCD display can be customized by pressing the Blower and Blower Speeds icons simultaneously for five (5) seconds, while the system is Off. **NOTE:** The Blower Speeds icon will not be illuminated during this process. Use the figure to locate the icons. A menu will be displayed to choose the following: Purge 24, (starts the blower every 24 hours for two (2) minutes at the same time the purge was set), Product Test Diagnostics, Temperature (F or C), and Language (English or Spanish).

MENU INSTRUCTIONS

Use the Blower icon to scroll through the different menu items. Use the Blower Speeds icon to change an option. For example, press and release the Blower icon to change from Purge 24 to Product Test, press and release again to arrive at the Temperature option. Press and release the Blower Speeds icon to change the temperature display from F (Fahrenheit) to C (Celsius).

PRODUCT TEST DIAGNOSTICS

After selecting the Product Test option from the menu, the unit will perform a series of tests to confirm correct installation of components. The test will begin by displaying the configuration number, followed by the software revision number. Next, the ISD-237 control box will be tested to ensure proper IR communication. The display will then test the Temperature and Low Water level sensor (ITW-209). Next, each of the six (6) icon buttons will begin to light. Press the illuminated button to proceed to the next icon. After the icon test, the pump will start for two (2) seconds on the high setting. Lastly, the LED light unit will be tested. If you receive an error on any of the tests, confirm proper installation of the component to the correct control box.

REMOTE CONTROL

Home Spa bath control system includes a waterproof floating universal remote. It controls all bath functions plus TV, DVD, CD, etc. which can be heard through the Sound Immersion Transducers (4-each).