

# forma™ and Designer Collection Signature Edition AirMasseur® Digital Control Keypad with Remote Control



## ELECTRONIC CONTROL

The Signature Edition AirMasseur® digital control keypad provides a safe convenient method of controlling your air bath unit.

## BLOWER ON/OFF AND MODES (BLOWER ICON)

To control the operation of the Blower, simply press and hold the key to change the setting to Constant, Wave, Pulse or Off. A 20 minute decreasing timer will be initiated when the blower motor starts. Press and release the Blower icon once to display the current blower mode and speed. The Blower icon should remain lit as long as the bath is connected to a power supply. The LCD will display “Const Air” and blower speed, “Wave Air” and blower speed, or “Pulse Air” and blower speed, while the key is pressed. The time remaining on the purge cycle is displayed after the bath has drained. “Purge Stop” is displayed while the Blower On/Off key is pressed during the purge cycle. This action will terminate the purge cycle. The mode settings will be remembered on the next startup.

## AIR HEATER

The Air Heater automatically comes on when the air blower is activated. This heater helps to maintain the temperature of the bath water.

## BLOWER SPEEDS (+- ICON)

Hold the key in Constant mode to go from High to Low then release and hold again to go from Low to High. Hold the key in Wave and Pulse mode to go from High to Medium and Medium to High. The system remembers the last speed setting on the next startup. The icon will light up when the blower is running. The LCD displays the blower speed from “10” (Low) or

“55” (Med) to “99” (High) while the key is pressed. You can reduce the auto purge idle time from 20 minutes to 10 minutes, by pressing and holding the Blower Speeds key for more than 5-seconds during the purge idle period.

## LED LIGHT (LIGHT ICON)


Hold the key for less than 2 seconds to turn the lights off or on. Hold the key for more than 2 seconds to change modes. The Light icon should remain lit as long as the bath is connected to a power supply. This function has a 2 hour timer and remembers the last mode. The LCD displays “Light On” or “Light Off” while the key is pressed for less than 2 seconds. “Light Cycle” is displayed if pressed for more than 2 seconds.

## CUSTOMIZED SETTINGS

The 12 character LCD display can be customized by pressing the Blower and Blower Speeds icons simultaneously for 5 seconds, while the system is Off. Note: The Blower Speeds icon will not be illuminated during this process. Use the above figure to locate the icon. A menu will be displayed to choose the following: Purge 24, (starts blower every 24 hours for 2 minutes at the time the purge was set); Product Test Diagnostics; Temperature (F or C); and Language (English or Spanish).

## REMOTE CONTROL

The Signature Edition control system includes a waterproof floating universal remote. It controls all bath functions plus a TV, DVD, CD, etc. which can be heard through the Sound Immersion Transducers (optional).

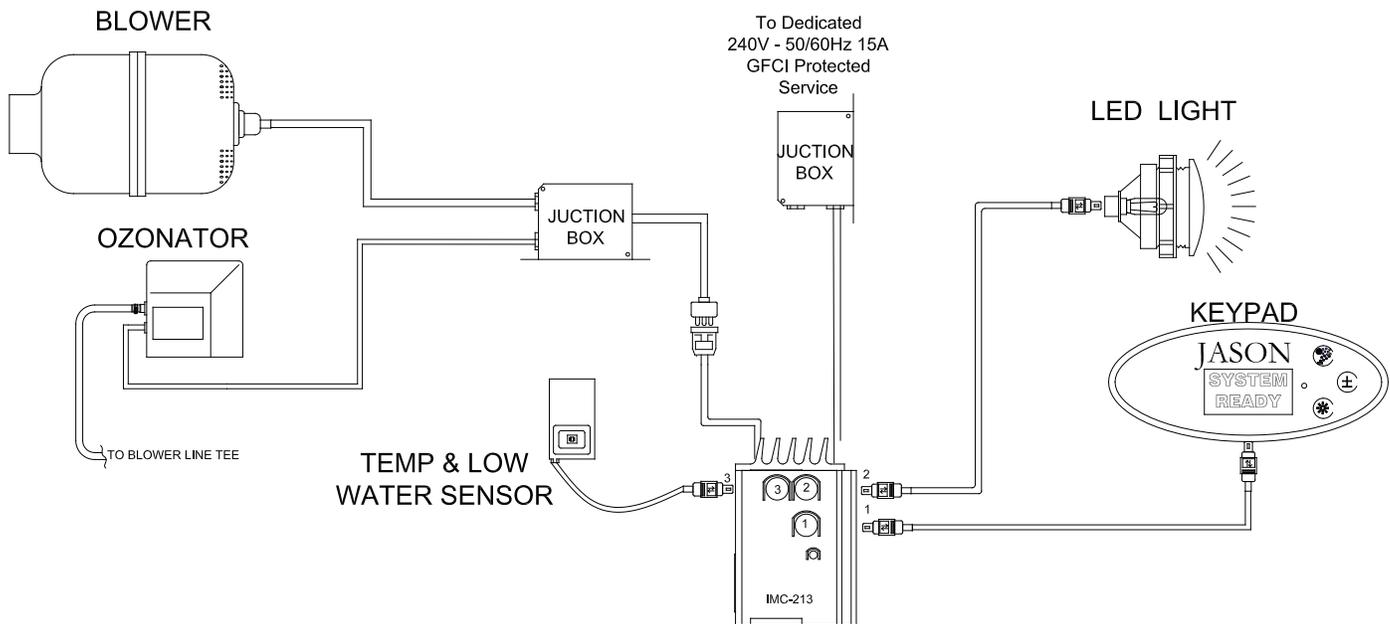

## STANDARD FEATURES

- The Jason AirMasseur® digital control keypad with display placed on the bath deck contains several keys used by the bather to control the air bath system On/Off function, the three air massage modes, and the underwater light.
- Chromotherapy: The system includes an LED Mood light with fixed colors, preprogrammed light shows, and bath-side access for bulb replacement.
- 20-minute AirMasseur® system timer.
- Air purge feature: Twenty minutes after the bath is drained the blower starts and runs for two (2) minutes to dry any moisture from the blower system. This 20 minute pause may be reduced to 10 minutes, by pressing and holding the Blower Speeds icon for 5 seconds.
- The touchpad control system is completely factory assembled and tested on each AirMasseur® bath.
- The touchpad control has a diagnostics feature to help with setup and troubleshooting.
- The Signature Edition includes a waterproof floating Universal Remote Control that controls all bath functions plus a TV, DVD, VCR, CD, etc.
- The LCD display alternately shows AirMasseur® time remaining and water temperature (+/- 5°F). It will also display the air purge feature pause time.
- The daily purge feature allows the blower to come

on at the same time every day for two (2) minutes to dry any moisture from the blower system. To set the daily purge, access the menu for the customized settings.

- The Signature Edition control system includes the Automatic Ozone system to protect the bath from bacteria, viruses, etc.

## SPECIFICATIONS

- Blower:** 1Hp, 240v, 60Hz, with integral air heater.
- Mood Light:** Light fixture with tubside access and multi-colored LED mood.
- Electrical Service:** A dedicated service protected by a ground fault interrupter is required. 240v, 60Hz, 15A.